

# Spectacle Kits

## INSTALLATION INSTRUCTIONS

<b>804638</b>	<b>Ultra Elite (Side Wire)</b>
<b>493581</b>	<b>Ultra Elite (Center Post)</b>
<b>816137</b>	<b>Advantage 1000/Millennium</b>
<b>10029298</b>	<b>Advantage 3000</b>
<b>454819</b>	<b>Ultravue/Ultra-Twin</b>



For More Information: Call (1-800-MSA-2222) or Visit Our Website at ([www.MSAnet.com](http://www.MSAnet.com))

**MSA**

Be Sure.  
Choose MSA.

MINE SAFETY APPLIANCES COMPANY  
PITTSBURGH, PENNSYLVANIA, U.S.A. 15230

# INSTALLATION INSTRUCTIONS

## TABLE OF CONTENTS

Ultra Elite Spectacle Kit (side wire) .....	2
Ultra Elite Spectacle Kit (center post) .....	2
Advantage 1000/Millennium .....	3
Advantage 3000 .....	3
Ultravue/Ultra-Twin .....	4

### Ultra Elite Spectacle Kit (side wire)

1. Fold the head harness over the front of the facepiece.



2. Compress the retaining spring and insert the spectacle kit into the facepiece in the "as worn" position.



3. Ensure the retaining spring is tight against the facepiece lens and the surrounding rubber.



4. Rotate the spectacles horizontally by sliding prongs in the rubber block.

5. Adjust the spectacles vertically by sliding the rubber block up or down the metal rods.



### Ultra Elite Spectacle Kit (center post)

1. Fold the head harness over the front of the facepiece.



2. Place the lower loop of the frame over the rubber lugs in the facepiece at the bottom of the lens.

3. Press the upper loop of the frame over the rubber lugs in the facepiece at the top of the lens.




4. Rotate the spectacles horizontally by sliding prongs in the rubber block.

# INSTALLATION INSTRUCTIONS

5. Adjust the spectacles vertically by sliding the rubber block up or down the metal rods.



5. Adjust the spectacles vertically by sliding the rubber block up or down the metal rods.

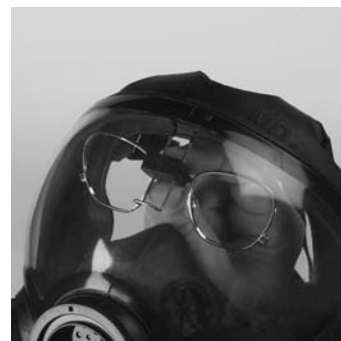

## Advantage 1000/Millennium

1. Fold the head harness over the front of the facepiece.

2. Compress the retaining spring and insert the spectacle kit into the facepiece in the "as worn" position.



3. Ensure the retaining spring is tight against the facepiece lens and the surrounding rubber.



4. Rotate the spectacles horizontally by sliding prongs in the rubber block.



## Advantage 3000

1. Fold the head harness over the front of the facepiece.

2. Compress the retaining spring and insert the spectacle kit into the facepiece in the "as worn" position.



3. Ensure the retaining spring is tight against the facepiece lens and the surrounding rubber.



4. Rotate the spectacles horizontally by sliding prongs in the rubber block.



# INSTALLATION INSTRUCTIONS

5. Adjust the spectacles vertically by sliding the rubber block up or down the metal rods.



4. Rotate the spectacles horizontally by sliding prongs in the rubber block.



## Ultravue/Ultra-Twin

1. Fold the head harness over the front of the facepiece.

2. Compress the retaining spring and insert the spectacle kit into the facepiece in the "as worn" position.



3. Ensure the retaining spring is tight against the facepiece lens and the surrounding rubber.



5. Adjust the spectacles vertically by sliding the rubber block up or down the metal rods.

